

Illustration



1. Detachable concentrator nozzle
2. Hang-up loop
3. On/Off Switch
4. Heat level switch
5. Coolshot (can be used on any setting and sets your style)
6. Air inlet grille with removable filter

For your safety



Please read carefully before using the product.

Do not leave this product switched on whilst unattended.

Disconnect the product from the mains supply when not in use or when cleaning or changing any attachments.

Do not cover the product at any time.

Do not take this product into a bathroom or use near a water basin.

To avoid the hazard of being burnt do not let any heated surface come into close contact with the skin.

Always place on a solid flat surface. Do not place this appliance when hot on any materials, fabrics or uneven surface.

The instructions for use contain important notes on safety and the information required for proper operation of the appliance.

Read the instructions in full; keep them in a safe place and pass them on to any subsequent owner.

All safety instructions are always intended for your own safety.

Safety instruction when connecting the appliance.

- This appliance complies with the recognised rules of technology and the pertinent safety regulations for electrical appliances.
- To avoid damage or danger by improper use, the instructions for use should be carefully kept and followed.
- If you give the appliance to another person then you should also supply them with the instructions for use.
- If the connection cable is damaged, a service agent recommended by the manufacturer in order to prevent any danger should only replace it. Please contact the manufacturer or his customer service.
- The voltage of the power source must be the same as specified on the rating plate.
- Connect the appliance only to AC current and to a socket with earthing contact. Do not pull the cable over sharp edges, clamp it into place or allow it to hang down. Keep the cable away from hot and damp areas.
- Before used check that the appliance functions properly. The appliance should not be used if:
 - the connecting cable is damaged
 - the appliance shows noticeable damage
 - the appliance has been dropped
- Never wind the mains cable around the appliance.
- Only insert the mains plug when the appliance is switched off.
- People with nervous disorders should not operate the appliance when alone in order to avoid any possible danger.
- **This appliance can be used by children from the age of 8 up as well as by persons with reduced physical, sensory or mental abilities or with lacking experience and/or**

knowledge, if these persons are supervised or have been instructed how to use the appliance in a safe way and have understood the hazards which could arise from using it. Children must not play with the appliance. Cleaning and user maintenance must unless they are supervised.

- Keep packaging material e.g. plastic bags out of the reach of children.



WARNING! Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

Risk of electric shock!

Never use the appliance with wet hands, in the bath or shower or over a filled wash basin. If the appliance falls into water, remove the mains plug immediately. Under no circumstances reach into the water when the appliance is still connected to the power supply.

- Never put the appliance on soft cushions or blankets during operation.
- Do not place the appliance or the connecting cables on hot surface e.g. cooker or similar or in the vicinity of open flames.

To avoid damage of the hair the air outlet should not be too close to the hair.

- Do not cover the air intake or air outlet during use.
- Make sure that you switch off the appliance when not in continuous use.
- The appliance is fitted with an overload protection which switches off in the case of an overload (e.g. air outlet or intake is blocked). If the appliance switches off during use, please rest the graduated switch to 'O' and wait for approximately 5 minutes then switch on again.
- The installation of a fault current protective device with a rated breaking current offers you additional safety by ensuring that 30mA will not be exceeded in the house installation. Let your installation electrician advise you.
- Remove the plug from the mains:
 - If the unit does not function properly
 - before cleaning and after use
- Do not pull on the connecting cable and do not carry the unit by means of the cable.

Safety instructions for cleaning and maintenance

- Always disconnect the appliance from the mains and allow the appliance to cool down before cleaning and maintenance, or if faults occur during operation.
- Do not use the connecting cable to pull on the plug nor remove the plug from the socket with wet hands.

Warning! **Risk of electric shock!**

Protect the appliance from moisture. Never put it into the dishwasher. Never immerse it in water.

Power switch settings



Heat switch setting



Please note

Your hairdryer has three heat settings, which are low, medium and high. The high heat setting can only be obtained when the

speed switch is set to position 2 and is set to high speed.

Concentrator nozzle

Unclip the nozzle for normal use or attach the nozzle to obtain a concentrated airflow for styling.

Coolshot facility

Pressing the coolshot button, which can be activated on any setting, operates the coolshot facility. When used at the end of the styling process the cool air will help to set your desired style.

Use in accordance with purpose

The appliance is **only intended for drying and styling human hair**.

No liability is accepted for any damage resulting from use for other purposes faulty operation or amateur repairs. Guarantee services are also excluded in such cases.

The appliance is not intended for professional purposes.

Initial use and operation

Preparing the hair

- Wash your hair and dry well.
- Comb your hair thoroughly.

- Do not use hairspray or other flammable chemical hair care products.

Drying Hair

Your appliance is fitted with 2 rocker switches and a COOLSHOT push button.

Cleaning and Care



- **Danger of electric shock!** Switch off the unit before it is to be cleaned and pull out the plug, disconnecting the appliance from the mains.
- **Danger of burns!** It is essential to let the unit completely cool down.
- Protect the appliance from dust, dirt and fluff. From time to time remove and clean the air inlet grille with separate air filter. Turn the air inlet grille counter clockwise to detach. Remove air filter, clean and put it back in place. All elements must be dry before being inserted. Turn the air inlet grille clockwise to reattach.
- Never immerse the appliance in water.
- Protect your appliance. Do not use a sharp or abrasive

cleaning agent.

- You can clean your appliance with a slightly damp cloth and dry it with a soft cloth.

Environmental Protection



- The packing material and the unit and accessories are made of materials that can be recycled.
- Appropriate separation and disposal of the remaining materials helps recycling.

Disposal of Appliance



This symbol on the product, operating instructions or packaging indicates that this product, at the end of its service life, may not be disposed of at a collection point for the recycling of electric and electronic appliances. Materials are to be recycled according to their classification. Through the correct disposal of the used appliance, recycling of materials and other forms of recycling, you are making a valuable contribution towards the protection of the environment.

Please ask your local authorities for a list of appropriate recycling points.

Aslotel producer registration number:

WEE/EJ0060TU

Guarantee

In addition to your statutory rights, aslotel guarantee the product to be free from manufacturing and component

defects for a period of 12 months from date of purchase. The guarantee does not cover faults due to misuse or damage caused by negligence or failure to follow the installation instructions.

If you require assistance and/or instruction manual, please contact us on the following email address: asl@aslotel.co.uk

