3. Sort out the garments according to their ironing temperatures. Start with the lower temperatures, It is set with the temperature regulator (6):

Synthetics, silk Wool

(low temperature) (medium temperature)

- octon, linen (high temperature)
 Insert the mains plug into a correctly installed safety socket.
 The control lamp (7) lights up.As soon as it shuts off,the set temperature is reached (approximately 1-2 min.). Now you can
- 6. Always pull the plug out of the socket after using the iron.

Auto shut-off function

- . The iron will be auto shut-off when the user is leaving.
- In stand position: it will be auto shut-off after 8 minites
- In horizontal position: it will be auto shut-off if it has not been moved for 30 seconds.

Auto Shut-off

♠ - After 8mins - After 30secs.

Move to re-start

Packing the iron after using

- Let the iron cool down completely.
 Wind up the cable slightly. Please do not wind it around the device.

Cleaning and Storage

- · Always remove the mains lead before cleaning!
- Clean the casing with a slightly damp cloth.
- Clean the iron with a silghtly moist cloth. Please do not use any
- abrasive cleaning agents!

 To clean the iron and remove deposits of starch and humid substances, rub it with a piece of cloth soaked in a mixture of

This device has been tested according to all relevant current CE guidelines, such as electromagnetic compatibility and low voltage directives, and has been constructed in accordance with the latest safety regulations.

Subject to technical changes without prior notice!

Guarantee

The device supplied by our Company is covered by a 12 month guarantee starting on the date of purchase (receipt).

During the life of the guarantee any fault of the device or its accessories ascribable to material or maufacturing defects will be eliminated free of charge by repairing or. at our discretion, by replacing it. The guarantee services do not entail an extension of the life of the guarantee nor do they give rise to any right to a new quarantee!

Proof of the guarantee is provided by the proof of purchase. Without proof of purchase no free replacement or repair will be carried out.

If you wish to make a clairn under the guarantee please return the entire machine in the original packing to your dealer together with the receipt.Damage to accessories does not mean automatic free replacement of the whole machine. In such cases please contact us. Breakage of plastic parts are always subject to a charge.

The guarantee lapses in case of unauthorized tampering.

After the expiry of the guarantee

After the expiry of the guarantee repairs can be carrided by the competent dealer or repair service against the payment of the ensuing costs.



5

asloteli

MANUAL



E001001

4

- 1 Soleplate
- 2 Skirt
- 3 Body
- 4 Up-cover

9 Auto shut-off light

- 5 Rear-cover
- 6 Temperature regulator
- 7 Control lamp
- 8 Wire tube

SPECIFICATIONS:

Rating voltage	220-240V	Weight	0.83Kg
Rating frequency	50Hz	Soleplate size	155cm²
Rating power	1100W	Size	250*108*115mm
Temperature range	65-230℃		

General Safety Instructions

- · Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty, the receipt and, if possible, the box with the internal packing.
- The appliance is designed exclusively for private use and for the envisaged purpose. This appliance is not fit for commercial use. Do not use it outdoors. Keep it away from sources of heat, direct sunlight, humidity (never dip it into any liquid) and sharp edges. Do not use the appliance with wet hands. If the appliance is humid or wet, unplug it immediately. Do not put it in water.
- · When cleaning or putting it away, switch off the appliance and always pull out the plug from t he socket (pull on the plug, not the cable) if the appliance is not being used and remove the attached accessories
- Do not operate the machine without supervision. If you should leave the workplace, always switch the machine off or remove the plug from the socket (pull the plug itself, not the lead)
- · To protect children from the dangers posed by electrical appliances, make sure that the cable is hanging low and that children do not have access to the appliance.
- Check the appliance and the cable for damage on a regular basis, Donot use the appliance if it is damaged.
- Do not try to repair the appliance on your own. Always contact an authorized technician. To avoid the exposure to danger, always have a faulty cable be replaced only by the manufacturer, by our customer service or by a qualified person and with a cable of the same type.
- . For BS plug, mains plug rewiring instruction must be fitted to the mains lead.
- · Use only original spare parts.
- · Pay careful attention to the following "Special Satety Instructions".

Special Safety Instructions

- WARNING! The ironing base becomes hot very quickly and takes a long time to cool down. Please do not touch it.
- When the iron is not in use it should be placed on its stand. Ensure that the surface on which the stand is placed is stable.
- Let the iron cool down completely before you pack it away.
- When handing the iron over to other people please consign also the use instrutions.
- The iron must not be left unattended while it is connected to the supply mains.
- The iron must be used on a stable surface.
- The iron is not to be used if it has been dropped, if there are visibe signs of damage or if it is leaking.
- If the supply cord is damaged. It must be replaced by manutacturer. its service agent or similmarly qualitled persons in order to avoid a hazard

First Use of the Machine

Numbering of the Controls

1 Soleplate 5 Rear-cover

2 Skirt 6 Temperature regulator

3 Body 7 Control lamp 8 Wire tube 4 Up-cover

· Clean the iron with a slightly moist cloth.

Use of the Iron

ATTENTION: iron only garments with this appliance. Ironing without steam

- 1. Place the iron on its stand.
- 2 Electrical connection:

Make sure that the iron voltage (see name plate) and the mains voltage match.