

Product : E003003

CAUTION

Important notice for a correct installation

This hair dryer must be placed out of reach. of a person using the bath or shower and must be connected to the mains supply in accordance to the latest regulations for electrical installations. Should the cable be damaged, it may only be replaced by a qualified technician, to avoid any risk.

Installation instructions

Make sure that the rating of your wiring system is adequate for the appliance (check its rating plate). Before fixing the appliance to the wall, remove the little cover (A) on the top, hiding one of the fixing points at the hair dryer (fig 1).

- A. Hold the unit in place at the required position For fixing to the wall marking two holes of 6 mm diameter, keeping a distance of 198 mm (fig 2). In order to ensure the best use of your hair dryer. We recommend that the upper hole be drilled at a height of 180 cm. above floor level.
- B. Fix the unit to the wall. All the fixing screws, grommets and washers are supplied with the appliance in a plastic bag (fig1).

NOTE: Do not forget to put the cover (A) in its place again.

- C. It is preferable to connect the hair dryer directly to the electric network, remove the power cable of the hair dryer, remove the part on the back side/top of the hair dryer (fig 3) - it can be knocked off - then thread the network cables through this part and fasten them to the terminal. Replace the cover by placing that one supplied with the accessories.

WARNING: this operation must be carried out by a qualified electrician.

DIRECTIONS FOR USE:

To start the hair dryer, remove the handgrip from its position. Air Flow and temperature can be adjusted by selecting one of the three positions.

- - MINIMUM POWER
- - MEDIUM POWER
- - MAXIMUM POWER




SHAVER and TEKNOS models are Fitted with 115 - 230 V - shaver sockets. NEVER CONNECT other appliances like coffee machines or heaters. The shaver socket has to be utilized only for shavers.

KRONOS and TEKNOS models are fitted also with an electronic timer that after 10 minutes

switch off the hair dryer automatically. To start again, replace the handgrip in its position and remove it again.

For cleaning of plastic parts, we recommend to use a damp cloth. Never use abrasive cleaners so as to not damage the finish.

The supplier is not responsible for damages to people or things in case the product has not been installed in accordance with the installation instructions given or because of misuse.

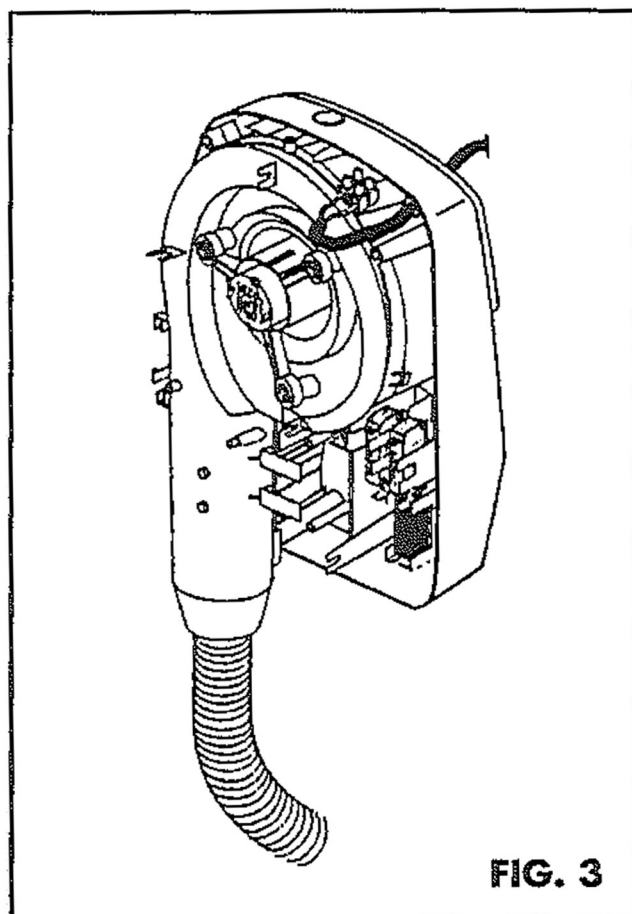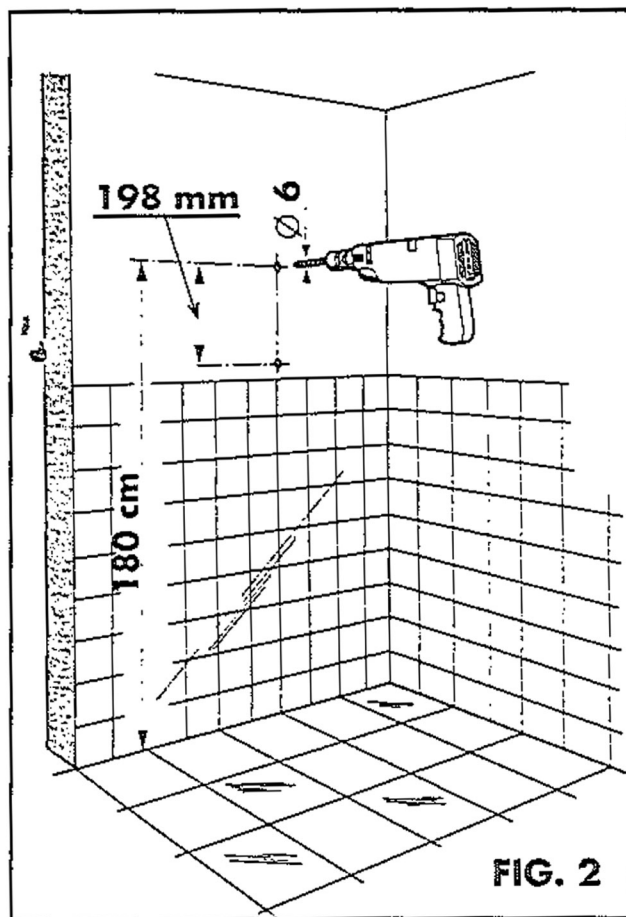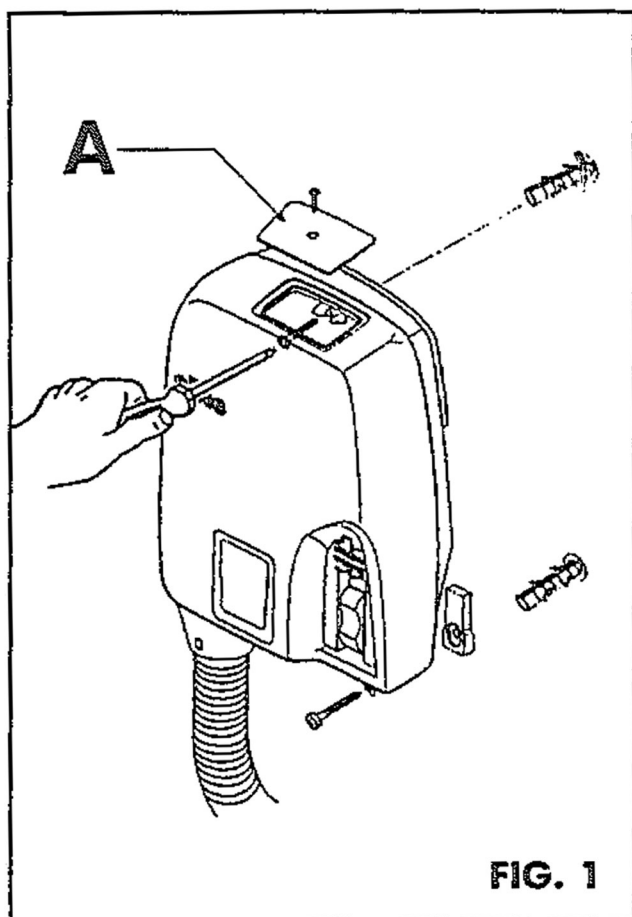

MODELS

ASL 3000 EC

ASL 3000 CT

ASL 3000 SC

ASL 3000 SCT