

aslotel

relationship • experience • choice

1800w black pistol grip hairdryer




product code:

E005044 (UK), E005043 (Euro)

model no : CH-609 220-240V AC / 50 Hz class II

Illustration

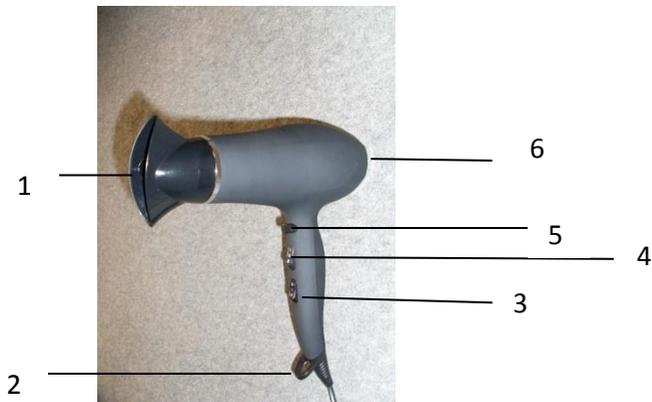

1. Detachable concentrator nozzle
2. Hanging loop
3. On / off switch (power)
4. Heat setting switch
5. Cool shot (can be used on any setting to set your style)
6. Air inlet grill

For your safety



Please read carefully before using the appliance.

- Do not leave the appliance switched on whilst unattended.
- Disconnect the appliance from the mains supply when not in use or when cleaning or changing any attachments.
- Do not cover the appliance at any time.
- It is recommended that you do not take the appliance into a bathroom or use it near a wash basin.
- To avoid the risk of burns do not let the hot parts of the appliance come into contact with the skin. Do not direct the airflow towards the eyes or other sensitive areas.
- Always place the appliance on a solid flat surface. When hot do not place this appliance on any materials, fabrics or uneven surfaces.

The instructions for use contain important notes on safety and the information required for correct operation of the appliance.

Read the instructions in full, keep them in a safe place and pass them on to any subsequent owner.

These instructions are intended for your safety.

Safety instructions when using the appliance.

- This appliance complies with relevant electrical safety regulations.
- To avoid damage or danger from improper use the instructions for use should be kept and followed carefully.
- If you give the appliance to another person then you should also supply them with these instructions for use.
- To prevent the risk of electric shock a damaged supply cord should only be replaced by a service agent recommended by the manufacturer. Please contact your supplier.
- The voltage of the power source must be the same as that specified on the rating plate.
- Connect the appliance only to a 240 volt AC earthed plug socket. Do not pull the supply cord over sharp edges, clamp it into place or use it to carry the appliance. Keep the supply cord away from hot and damp areas.
- Before use check that the appliance functions properly. The appliance should not be used if:
 - it shows signs of damage.
 - it has been dropped.
 - the supply cord is damaged.

- Never wind the supply cord around the appliance.
- Only insert the mains plug when the appliance is switched off.
- People with nervous disorders should not operate the appliance when alone.

This appliance can be used by children from the age of 8 up as well as by persons with reduced physical, sensory or mental abilities or lacking experience and/or knowledge, but only if these persons are supervised or have been instructed how to use the appliance safely and have understood the hazards which could arise from using it. Children must not play with the appliance.

- Keep packaging material, e.g. plastic bags, out of the reach of children.



WARNING! Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

Risk of electric shock!

- Never use the appliance with wet hands, in the bath or shower or over a filled wash basin. If the appliance falls

into water, remove the mains plug immediately.

- Under no circumstances reach into the water when the appliance is still connected to the power supply.

- Never put the appliance on soft cushions or blankets whilst in use.

- Do not place the appliance or the supply cord on hot surfaces, e.g. cooker or similar, or in the vicinity of open flames.

- To avoid damage to the hair the air outlet should not be held too close to the hair.

- Do not cover the air intake or air outlet during use.

- Make sure that you switch off the appliance when not in continuous use.

- The appliance is fitted with an overload protection device which switches off the appliance in the case of an overload (e.g. blocked air outlet or air intake). If the appliance switches off during use, return the power switch to 'O' and wait for approximately 5 minutes before switching on again.

- The installation of a fault current protective device with a rated breaking current of 30mA in the building's fixed wiring offers you additional safety. A suitably qualified electrician will be able to advise you.

- Remove the plug from the mains:

- before cleaning and after use.
- if the unit does not function properly.
- Do not pull on the supply cord and do not carry the appliance by means of the cord. The appliance may be stored on a hook by using the hanging loop.

Safety instructions for cleaning and maintenance

- Always disconnect the appliance from the mains supply and allow it to cool down before cleaning and maintenance or if faults occur during operation.
- Do not use the supply cord to pull on the plug and do not remove the plug from the socket with wet hands.



Warning!

Risk of electric shock!

- Protect the appliance from moisture. Never put it into the dishwasher. Never immerse it in water.

Intended use

- The appliance is only intended for **drying and styling human hair**.
- **The appliance is not intended for professional use.**
- No liability is accepted for any damage or injury resulting from unauthorised repairs, use for other purposes, negligence or failure to follow these instructions. Guarantee is void in such cases.

Control settings

Power switch settings



Heat switch setting



Drying hair

- After washing dry your hair with a towel and comb thoroughly.

Do not use hairspray or other flammable chemical hair care products.

- Switch on the appliance by selecting the desired speed (power) and heat settings. (See “control settings”).
- To dry your hair hold the appliance at an appropriate and comfortable distance.

Concentrator nozzle

- Unclip the nozzle for normal use or attach the nozzle to obtain a concentrated airflow for styling.

Cool shot

- The cool shot facility can be used on any heat or speed setting. Pressing the cool shot button at the end of the styling process produces cool air that will help to set your desired style.

Cleaning and care



• Danger of electric shock!

 
- Before cleaning switch off the appliance and pull out the plug to disconnect it from the mains supply.



• Danger of burns!

- It is essential to let the appliance cool down thoroughly.
- Protect the appliance from dust, dirt and fluff. From time to time remove and clean the air inlet grille and mesh filter. To remove pull the air inlet grille downwards, to refit line up the air inlet locating peg with the body of the appliance and snap into place.
- Never rinse the appliance in running water or immerse it in water.
- Clean the appliance with a slightly damp cloth and dry it with a soft cloth. Do not use sharp or abrasive cleaning agents.

Environmental protection



- The appliance and its packaging materials are made of materials that can be recycled.
- Correct separation and disposal of waste materials helps reduce the impact on the environment.

Disposal



This symbol on the appliance, operating instructions or packaging

indicates that this appliance, at the end of its useful life, may not be disposed of as normal household waste. It must be disposed of at a collection point specifically designated for the recycling of electric and electronic appliances. Materials must be recycled according to their classification. Through the correct disposal of the appliance and packaging materials you are making a valuable contribution towards the protection of the environment.

Please ask your local authority for a list of appropriate recycling points.

Aslotel producer registration number:

WEE/EJ0060TU

Guarantee

In addition to your statutory rights, Aslotel guarantee the appliance to be free from manufacturing and component defects for a period of 12 months from date of purchase. The guarantee does not cover faults due to misuse or damage caused by negligence or failure to follow these instructions.

Service

Should the appliance fail to operate check that the supply fuse is not blown and that the mains supply is switched on. If the appliance still does not work please contact our technical helpline on the number below. Please note that the appliance contains no consumer serviceable components so please do not attempt to repair it yourself.

*Technical Helpline : +44 (0)1372
362533*

Monday – Friday 9am to 5.30pm

E-mail : asl@aslotel.co.uk

aslotel

relationship • experience • choice

aslotel (2000) limited, pebble close, tadworth, surrey KT20 7PA
tel +44 (0)1372 362533 fax +44 (0)1372 362284
e-mail asl@aslotel.co.uk www.aslotel.co.uk